


**A HYDROLAP SEAM - SHORING WALL VERTICAL SEAM - PLAN VIEW**



- 1) LINE UP TOP LAYER OF PRETAK TO BOTTOM SHEET FACTORY SEAM LINE
- 2) REMOVE RELEASE LINERS COVERING ADHESIVE EDGES ON BOTTOM AND TOP SHEET
- 3) ROLL HEAVY ROLLER OVER TOP SHEET SEAM WHILE APPLYING SIGNIFICANT PRESSURE
- 4) VERIFY SEAM IS COMPLETELY BONDED
- 5) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT

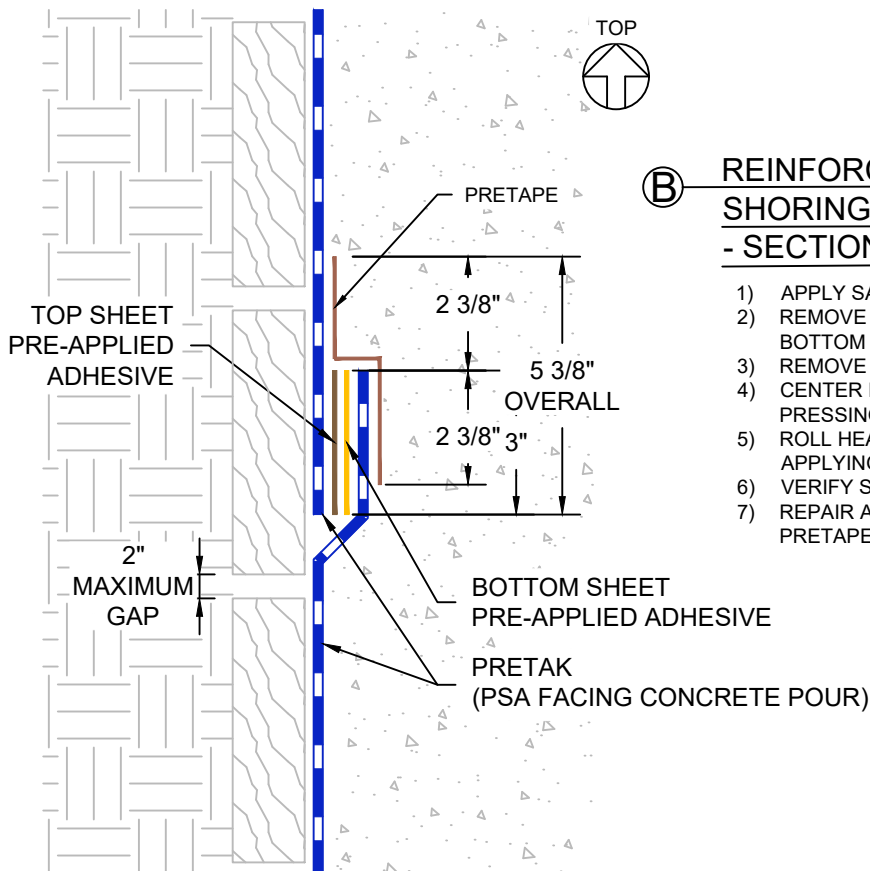

**B REINFORCED HYDROLAP SEAM - SHORING WALL HORIZONTAL SEAMS - SECTION VIEW**

- 1) APPLY SANDWICH FACTORY SEAM
- 2) REMOVE RELEASE LINER COVERING PSA EDGE ON BOTTOM AND TOP OF SHEET
- 3) REMOVE PRETAPE RELEASE LINER COVERING ADHESIVE
- 4) CENTER PRETAPE EVENLY OVER SEAM AND ADHERE PRESSING DOWN ONTO SEAM
- 5) ROLL HEAVY ROLLER OVER PRETAPE SEAM WHILE APPLYING SIGNIFICANT PRESSURE
- 6) VERIFY SEAM IS COMPLETELY BONDED
- 7) REPAIR ANY FISHMOUTHS OR POOR SEAM BONDS WITH PRETAPE AND PM SEALANT

**SEAMS OPTIONS - FACTORY PRE-APPLIED ADHESIVE**

	SYSTEM NAME	DRAWING NUMBER	
	PRETAK	51.310.7.1	
	DRAFTER	DATE	
	RJT	02/05/2024	

AS A SUPPLIER OF FINISHED PRODUCTS ONLY, EPRO SERVICES, INC. DOES NOT ASSUME RESPONSIBILITY FOR ERRORS IN DESIGN, ENGINEERING OR DIMENSIONS. THE PROJECT TEAM MUST VERIFY ALL DIMENSIONS AND SUITABILITY OF DETAILS. THE PRODUCTS LISTED ARE TRADEMARKS OF EPRO SERVICES, INC.

NTS

PAGE 1 OF 1